




Results in 3 minutes or sooner

WITH WATCH CLEAR YELLOW HARDNESS TEST KIT

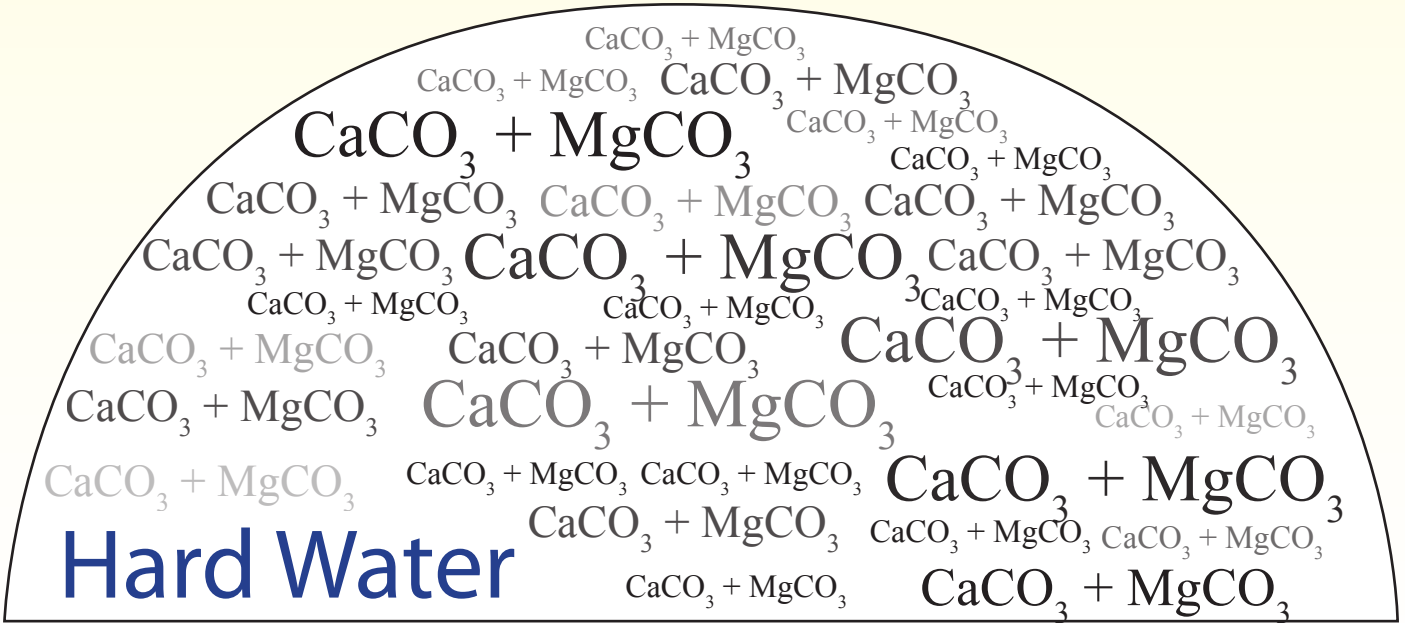

in water is caused by dissolved calcium and magnesium carbonate $\text{CaCO}_3 + \text{MgCO}_3$

CLEAR YELLOW HARDNESS TEST KIT

No test is more accurate !

30x Test Kits
in Box



Dear Customer,

Thank you for choosing Watch product,

Please read the instructions carefully before using the **WATCH HARDNESS TEST KIT**. It will provide you with the necessary information for correct use of the kit. If you have any further questions, please contact a **WATCHWATER** distributor or Watch offices.

a simple throw away test kit



WATCH GMBH, Fahrlachstr. 14, 68165 Mannheim
Tel.: (+49) 0621-87951-0 Web: www.watchwater.de

CLEAR YELLOW

HARDNESS TEST KIT

Description

Designed to test **FILTERSORB SP3** Water, Hard Water / Tap Water / Soft Water / Softener and any other water produced by Scale Prevention media or any other system.

Consumables

- a) Reagent with test water bottled 50ml

Required apparatus for Testing

NONE



Hard and Soft Water - Test Method

- 1.) Hard Water Preparation, fill a 50ml Hardwater or Tapwater into the Test bottle Nr1.
*Hardwater is water from tap or from any other device which says saltless water system including magnetic water systems, electronic water conditioner any physical or audio frequency systems.
- 2.) SP3 or soft water preparation: Run SP3 unit for 1 Minute to get fresh water from the tap, fill in a jug and pour into bottle up to 50ml
- 3.) Close both Test Kit bottles with caps.
- 4.) Shake both Test bottles gently for 5 seconds till the reagent is dissolved.
- 5.) Wait for 30 seconds and see the following results.
- 6.) The water Test according to the Test shows significant precipitation in hard or very hard water. (Test bottle Nr. 1) Dirty Yellow Color will appear.
- 7.) The water Test according to the Test shows no signs of a precipitation is soft water or SP3water from (bottle Nr. 2) Clear Yellow Color will appear.
- 8.) **Instructions: When the Test is over despose the sample into the sink. Do not drink! Throw the Test bottles into the garbage.**



CLEAR YELLOW

HARDNESS TEST KIT

THERE ARE TWO TYPES OF SOFT WATER:

A) Natural SOFT WATER

B) Artificial SOFT WATER

A) „Natural“ SOFT Water made by **FILTERSORB SP3** has made by adding very precious minerals in water. Natural soft water will show in Test Kit better dissolvation & hardness then Hard Water.

B) „Artificial“ SOFT Water produced by „**IONEXCHANGE**“ Resin softeners work by exchanging equal amount of calcium and magnesium Ions for **SODIUM IONS**, because Sodium Carbonate does not form time scale it stays in solution you have soft water.

But of course its TDS (Total Dissolved Solids) will increase. SOFT Water made by artificial softeners has more TDS than HARD water. Sodium carbonate has higher electrical conductivity. Artificially made SOFT Water is not advisable to drink. First because of its **SODIUM CONTENT** and secondary because of bacteria through resin bed contamination.

NOW LETS TEST

To **check** the **hardness of the water** after it passes your inline filter filled with **FILTERSORB SP3** or any device as well as SOFTNOR made with **FILTERSORB SP3**, you need a Test Kit. Test Kit is available for a few dollars from WatchWater distributors. Test Kit is a very harmless powder. This powder will dissolve immediately in SOFT Water and will not dissolve in HARD water.

A) „Natural“ SOFT water will show a clear solution

B) HARD water or water made by other devices will show absolute turbidity.

„Natural SOFT water“ Made by FILTERSORB SP3 is full of calcium and magnesium minerals.

Natural SOFT WATER will never cause scale problems.

In) House Holds, Commercial, Car Washing Systems, Automatic Dish Washing Machines, Food Processing Machines, Cleaning Systems, Bottl Washer, Automatic Laundry Washing, Tankless Water Heaters, Showers, Sinks, Toilets, Bathtubs, Countertops, Windows, Mirrors, Transportation Vehicles, and Floors. Medical or Dental Applications. Medical or Dental Applications, Medical Instruments, Dental Instruments, Autoclaves, Sterilizers and Humidifiers.

FILTERSORB SP3 is just a wonder



CLEAR YELLOW HARDNESS TEST KIT

„Your Logo“ branding for reseller & distributors

WATCH offers the possibility to create your own Packaging with your own LOGO.



Your LOGO

**CLEAR YELLOW
HARDNESS TEST KIT**

30x Test Kits
in Box

DESCRIPTION - HOW TO USE TEST KIT:

HARD AND SOFT WATER - TEST METHOD

1.) Hard Water Preparation. fill a 50ml Hardwater or Tapwater into the Test bottle Nr. 1. Hardwater is water from tap or from any other device which says saltless water system including magnetic water systems, electronic water conditioner any physical or audio frequency systems.

2.) SP3 or soft water preparation:
Run SP3 unit for 1 Minute to get fresh water from the tap, fill in a jug and pour into bottle up to 50ml.

3.) Close both Test Kit bottles with caps.

4.) Shake both Test bottles gently for 5 seconds till the reagent is dissolved.

5.) Wait for 30 seconds and see the following results.

6.) The water Test according to the Test shows significant precipitation in hard or very hard water. (Test bottle Nr. 1)
Dirty Yellow Color will appear.

7.) The water Test according to the Test shows no signs of a precipitation is soft water or SP3 water from (bottle Nr. 2)
Clear Yellow Color will appear.

8.) Instructions:
When the Test is over dispose the sample into the sink. Do not drink! Throw the Test bottles into the garbage.

Your company adress

**CLEAR YELLOW
HARDNESS TEST KIT**

Your LOGO

Your Individual Packaging

For Resellers & Distributors

Increases your Sales 100%

Ask for quantity and pricing

FILTERSORB SP3 is just a wonder



WATCH GMBH, Fahrlachstr. 14, 68165 Mannheim
Tel.: (+49) 0621-87951-0 Web: www.watchwater.de